
Precision Hydrogen (All Colour Screen Models)

Installation Guide

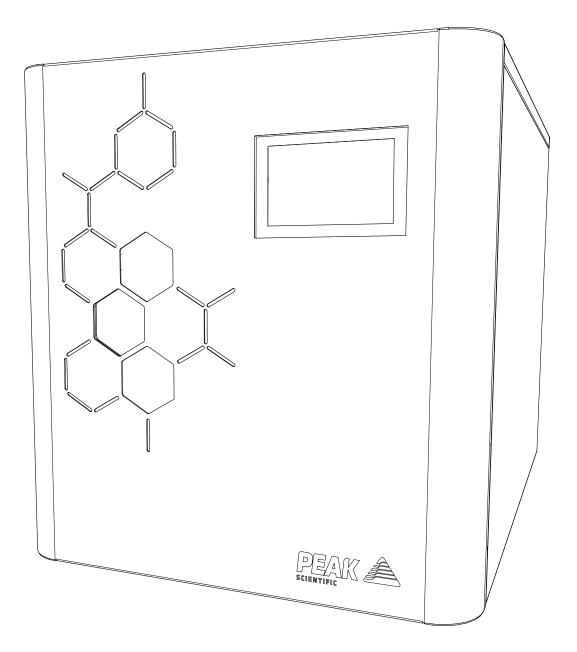



Change History

Rev	Comment	Name	Date
1	Initial issue	Liam Couttie	04/10/2016
2	Transit Plugs Added	Liam Couttie	22/03/2018
3	Layout Update for Printing	Liam Couttie	06/01/2020
4	Purge Step Addition	Liam Couttie	17/01/2022
5	H2 Ventilation Info Update	Liam Couttie	16/01/2023

How to use this Manual

This installation guide is intended to be used as a step by step, quick start guide, to facilitate installation and configuration.

Please visit www.peakscientific.com/downloads to download the full User Manual for your gas generator.

Thank you for selecting Peak Scientific to meet your Gas Generation needs, and should you require any further assistance or support please do not hesitate to contact Peak Scientific or the Peak Partner from which you purchased your Generator.

Safety Notices

Peak Scientific Instruments cannot anticipate every possible circumstance which may represent a potential hazard. The warnings detailed within this document detail the most known potential hazards, but by definition cannot be all inclusive. If the user employs an operating procedure, item of equipment or a method of working which is not specifically recommended by Peak Scientific, the user must ensure that the equipment will not be damaged or become hazardous to persons or property.

Symbols

This document uses the following symbols to highlight specific areas important to the safe and proper use of the Generator

WARNING	A WARNING notice denotes a hazard. It calls attention to an operating procedure, process or similar, which if not correctly performed or adhered to, could cause personal injury or in the worst case death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood or met.
CAUTION	A CAUTION notice denotes a hazard. It calls attention to an operating procedure, process or similar, which if not correctly performed or adhered to, could cause damage to the Generator or the Application. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood or met.
<u>Í</u>	Caution, risk of electric shock. Ensure power to the Generator has been removed before proceeding.

Safety Notice to Users



These instructions must be read thoroughly and understood before installation and operation of your Peak Precision Hydrogen Generator. Use of the Generator in a manner not specified by Peak Scientific MAY impair the SAFETY provided by the equipment.




When handling, operating or carrying out any maintenance, personnel must employ safe engineering practices and observe all relevant local health and safety requirements and regulations. The attention of UK users is drawn to the Health and Safety at Work Act 1974, and the Institute of Electrical Engineers regulations.




If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

Fittings Kit

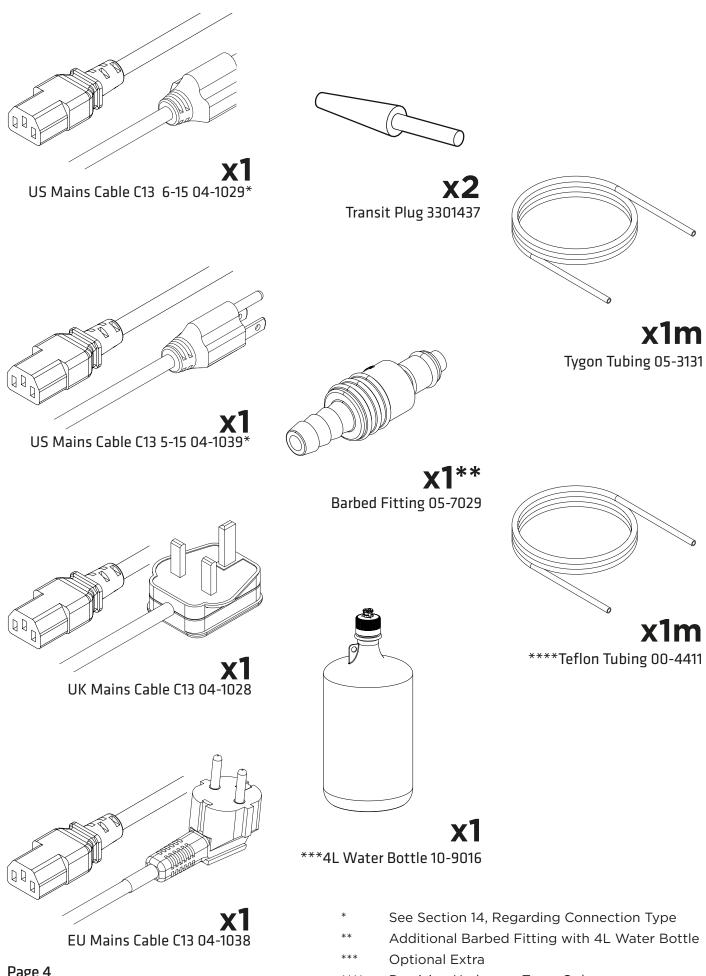


Precision Hydrogen Trace Only



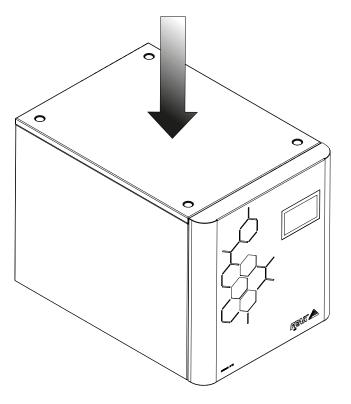

Unpack the generator from the shipping crate and position on a flat surface, in desired area.


WARNING the weight of the unit constitutes a two man lift. Safe lifting practices are advised.

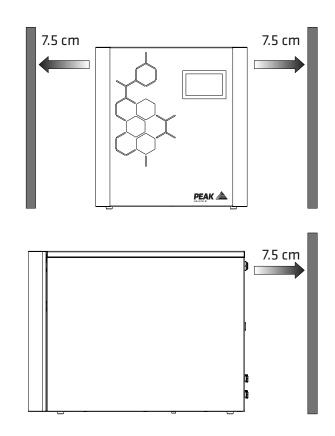


Ensure that there is at least 7.5 cm of space, to the sides and rear of the generator.

1.


2.

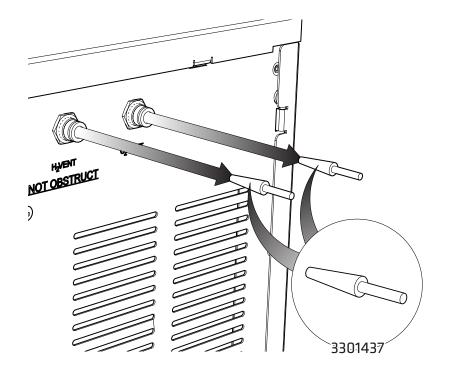

Remove the **two Transit Plugs** from the H_2 and O_2 **Vent** ports located at the rear of the generator.

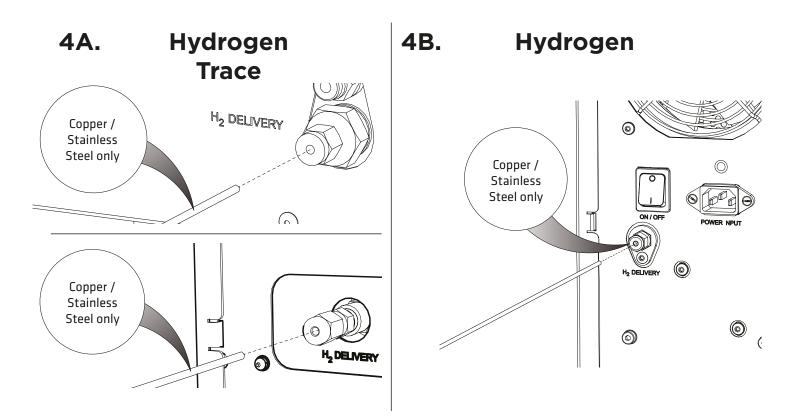


Connect tubing, to the **H2 Delivery** port at the rear of the generator. Tubing must be clean grade copper or stainless steel only.

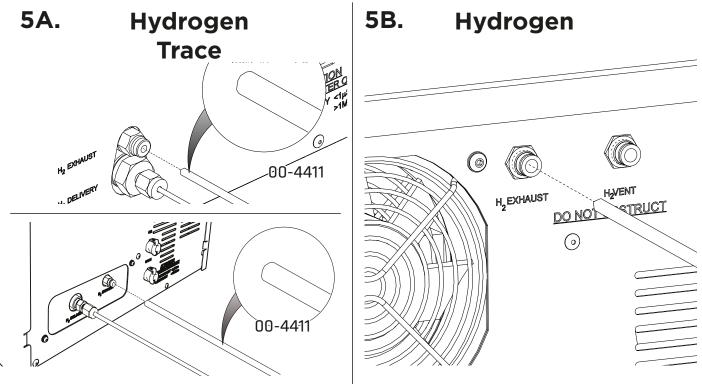


Fit appropriate tubing¹to **H2 Exhaust** output. For **Trace** models use the supplied **Teflon Tubing**.

For **Trace** models: if venting from the H2 Exhaust port, please ensure that the appropriate tubing is connected to the to H2 Exhaust output. Please do not attach the 1m length of supplied tubing (00-4411) to the H2 Exhaust or H2 Vent ports if NOT venting gas to a fume hood or ventilation system as this can result in a localized build-up of hydrogen gas.

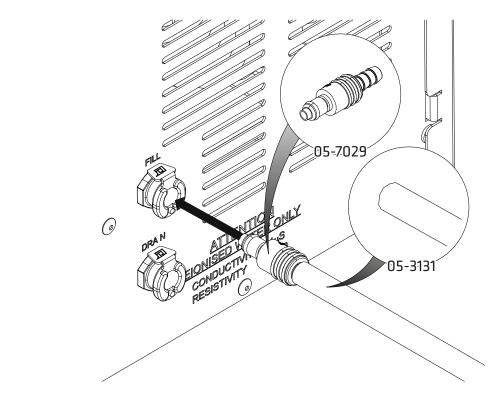

The **Tygon Tubing** and **Barbed Fitting** supplied in the generator fittings kit should be connected to the **Fill** port at the rear of the generator.


6.

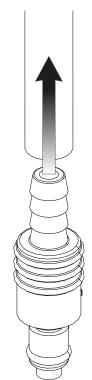

If using a **Peak Water Bottle**, connect the remaining **Barbed Fitting**, from the fittings kit, to the other end of the **Tygon Tubing**.

If using an alternative water bottle, connect the **Tygon Tubing** to your **High Grade De-Ionised Water Supply** and **continue from step 13**.


8.

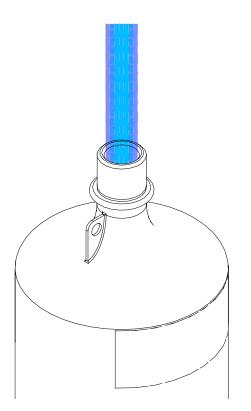




Remove the lid from the bottle by unscrewing anticlockwise and rinse the bottle with **High Grade De-Ionised Water ≤1µS/cm @ 20°C**.




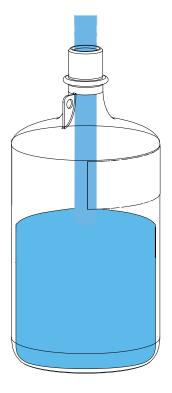


After the bottle has been rinsed it should be filled with **High Grade De-Ionised Water**.

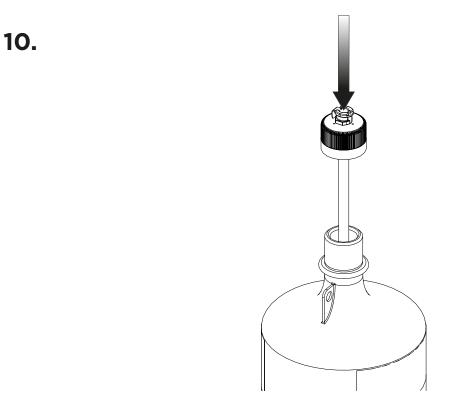

Once the bottle has been **filled**, replace the **lid**.

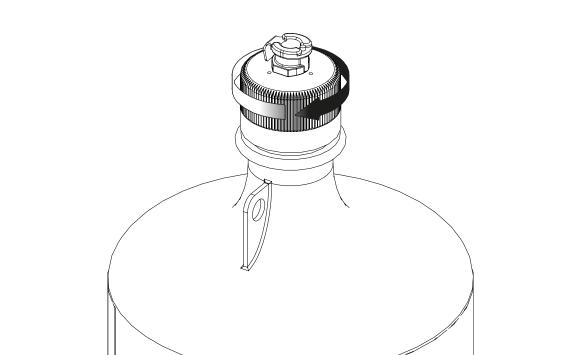



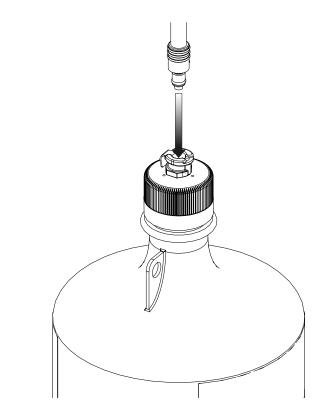


Connect the **Barbed Fitting** on the end of the **Tygon Tubing** to the connection on the top of the filled **Water Bottle**, ensuring there is a secure connection.

12.


11.



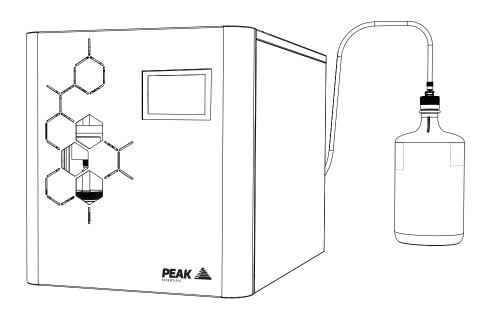


Make sure the Water Bottle is on a level surface at the same height as the generator.

14.

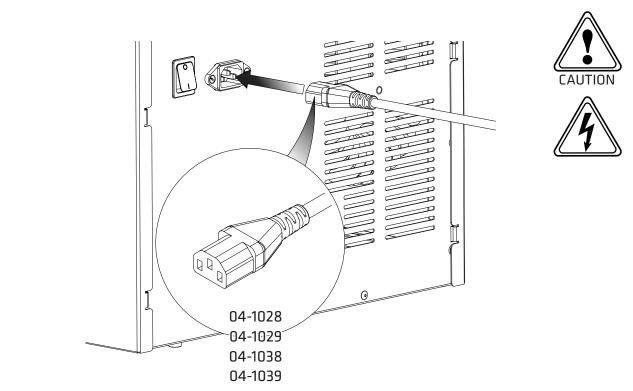

Select the appropriate **mains cable** from the fittings kit and plug the IEC 60320/C13 cable into the **mains input** at the rear of the generator.


Please note both 110V and 230V US cables have been supplied, ensure correct mains cable is used to match the rating on the generator's serial plate.

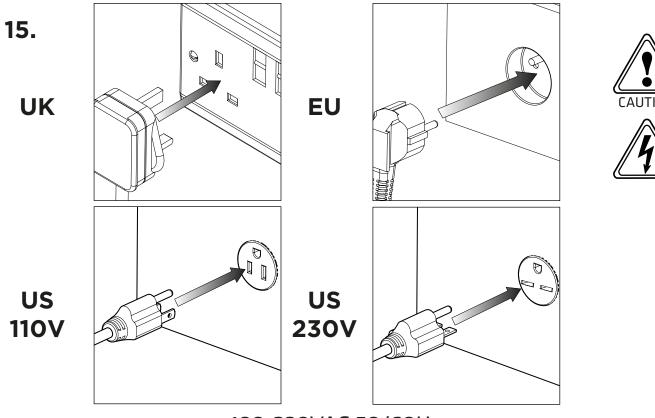


100-230VAC 50/60Hz

Plug the mains cable into an appropriate 100-230VAC 50/60Hz single phase power supply.

CAUTION ensure the correct cable has been selected for your electrical supply

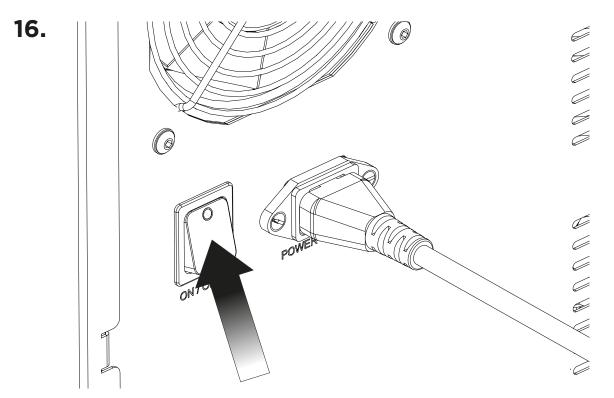


Turn the generator on, using the **switch** on the back of the unit.

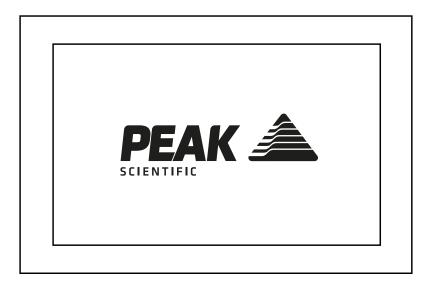

The HMI screen will **illuminate** and the **Peak logo** will be displayed.


18.

17.

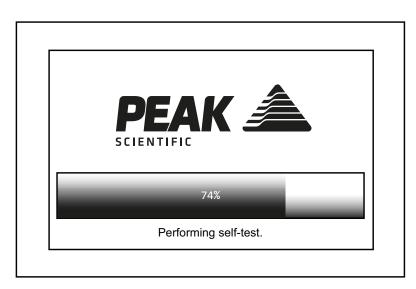


The system will now run **diagnostics** and a **leak detection** test.

Note: In the unlikely event that diagnostics are unsuccessful, an alarm will sound and a yellow failure screen will be displayed, complete with a mute button. The user is prompted at this point to contact their Peak service provider.

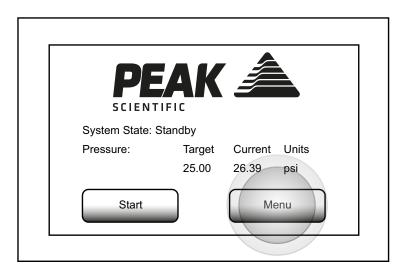


Upon successful completion of the diagnostic checks, the home screen will be displayed. The user should now **select MENU**.

20.

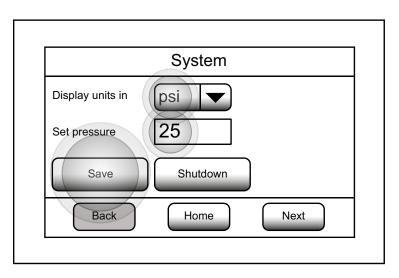


The desired unit of measure and pressure value should now be selected by pressing the **unit** or **pressure value** respectively.

Press the **SAVE** button to store the new value.

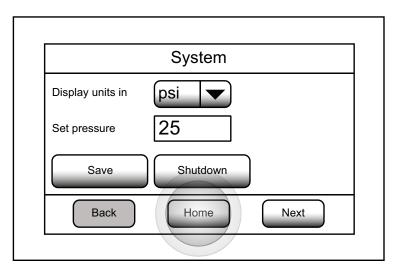


Once the desired unit of measure and pressure have been selected, pressing **HOME** will return the user to the home screen.

22.

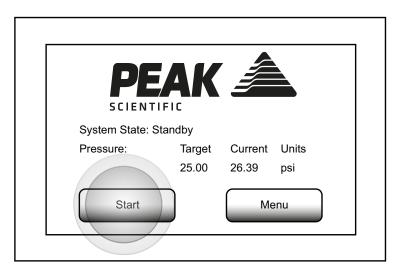


Pressing **START** will start the supply to the application. The unit may take a few minutes to adjust to the desired pressure.

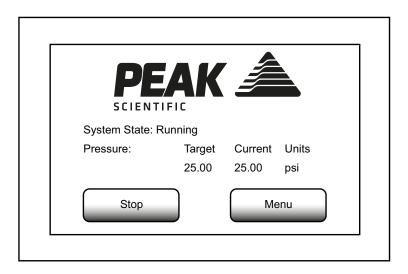


The unit will now maintain the desired pressure, while the application is supplied.

24.

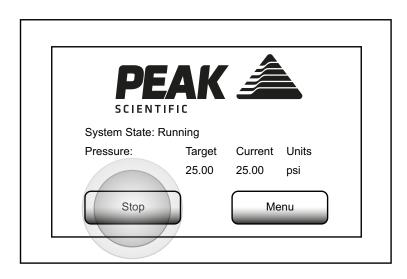


The system can be stopped at any time by pressing **STOP**. This will return the generator to Standby mode.

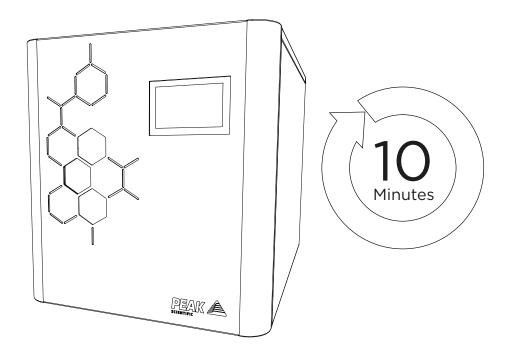


Before connecting the generator to the application, **it is recommended to purge the generator to atmosphere for a maximum period of 10 minutes** to evacuate any condensed moisture from the gas outlet

26.

Connect the other end of the tubing from the generators hydrogen outlet to the **Application**.

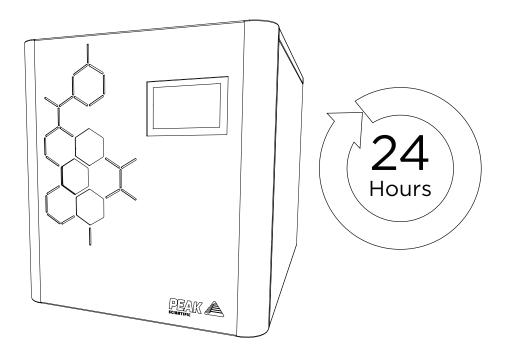


It is recommended that any **Precision Trace** unit is left to run for **24 hours**, and the **Hydrogen** unit is left to run for **12 hours** before utilisation.

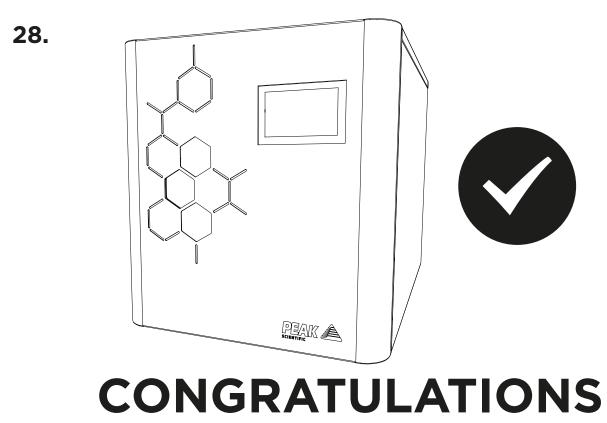

Your **PEAK SCIENTIFIC** gas generator is now fully installed, operational and ready to supply gas on demand to your instrument.

General Notes

Ensure the water supply bottle is not located above the height of the generator, and that the supply is not pressurised.

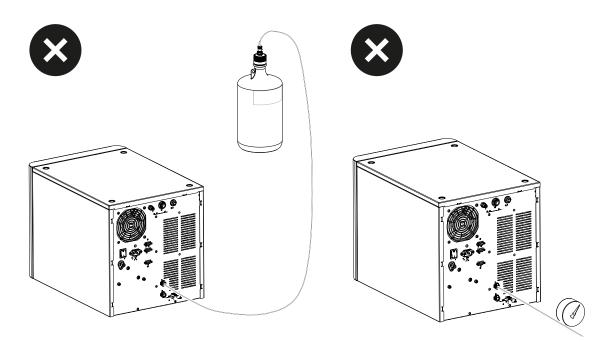

Electrical requirements are 100-230V rms nominal. However, running continuously at voltages outwith this is not recommended. Extended periods at extremes can have a detrimental effect on the operation and life of the Generator.


Ensure that all pipework between generator and equipment is checked for leaks.

Please familiarise yourself with the full **User Manual** available at **www.peakscientific. com/downloads** This includes all other technical specifications, operating instructions, service requirements, contact details and trouble shooting.

Go Online or Complete and Return

You can register for your **FREE 12 month Warranty** with ease online at www.peakscientific.com/protected.

Alternatively, you can send the completed form to Peak Scientific by post or email at warranty@peakscientific.com.

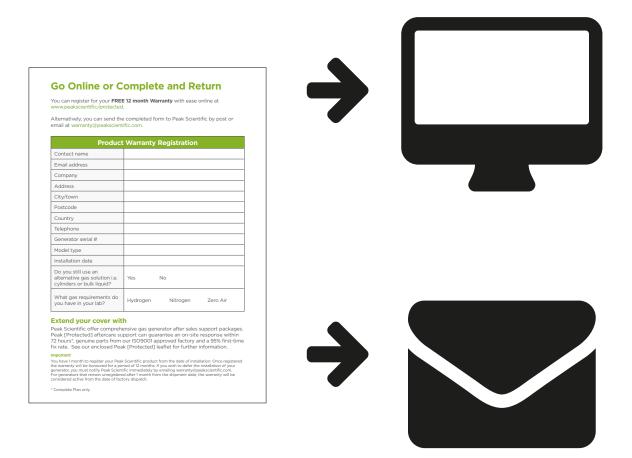

Important!

You have **1 month to register** your Peak Scientific product from the date of installation. Once registered the warranty will be honoured for a period of 12 months. If you wish to defer the installation of your generator, you must notify Peak Scientific immediately by emailing warranty@peakscientific.com. For generators that remain unregistered after 1 month from the shipment date, the warranty will be considered active from the date of factory dispatch.

Please visit www.peakscientific.com/downloads to download the full User Manual for your gas generator.

[PEAK Protected][™]

Peak Scientific has highly trained, fully certified Field Service Engineers located in over 20 countries across every continent around the world. This allows us to provide an industry-leading rapid response service to our customers. With **[Peak Protected]**, your laboratory's productivity becomes our top priority.

To discuss Peak Protected generator cover and payment options speak to your local Peak Representative or for further information contact: **protected@peakscientific.com**

Peak Scientific

Fountain Crescent Inchinnan Business Park Inchinnan PA4 9RE Scotland, UK **Tel:** +44 141 812 8100 **Fax:** +44 141 812 8200

For further information on any of our generator products please contact **marketing@peakscientific.com**



Precision Hydrogen Installation Guide Rev 5 RSID 2370 PN IG-PREC-H2PCB EN 16/01/23