



Desiccant capsule replacement

When to replace? Silica gel will darken as it becomes saturated. Depending on usage a 12 week minimum lifetime is expected.

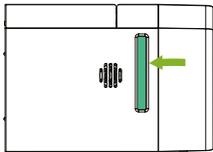


Step 1: Check Silica gel colour via the window on the left-hand side panel of the generator (if blue/green it needs to be replaced).

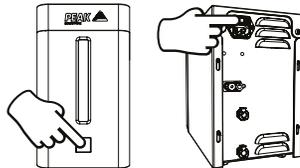


Step 2: Press and hold the power button for 5 seconds to shutdown and depressurize. Now turn off the main power switch at the back of the unit.




Step 3: Open the top panel by lifting gently.

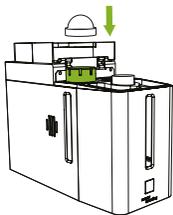


Step 4: Loosen and remove the cap of the desiccant dryer by placing the tool onto the cap and turning counter-clockwise.

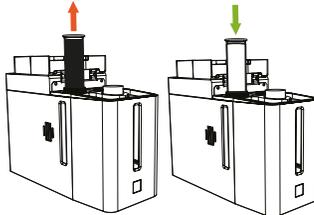


Step 5: Remove the saturated desiccant capsule and replace with a fresh capsule.

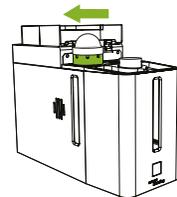

Step 6: Replace the cap and place the tool on top, tighten with the tool by turning it clockwise.

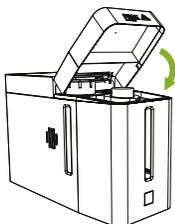

Step 7: Close the top panel.

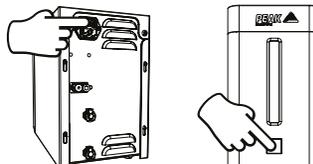

Step 8: Power up the generator using the main power switch on the rear of the unit. Once diagnostics are complete, the LEDs will be solid green and the generator will be ready to deliver gas to the application. Press the front button to supply gas to the application.


Simple user maintenance guide



De-ionizer cartridge replacement

When to replace? Every 12 months from original installation.


Please ensure Please ensure that you change the de-ionizer (DI) cartridge as soon as you unpack the replacement. The DI cartridge needs to be wet when installed. If the DI cartridge has dried out it will affect generator performance. To reactivate a dry DI cartridge, submerge it upside down in deionized water so the air inside escapes, then fit as described in the following steps.

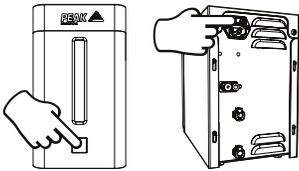

Step 1: Press and hold the power button for 5 seconds to shutdown and depressurize. Now turn off the main power switch at the back of the unit.




Step 2: Open the top panel by lifting gently.

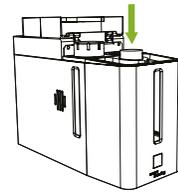

Step 3: The de-ionizer cartridge is located in the water tank and can be accessed by opening the top panel.



Step 4: The de-ionizer cartridge can be removed by turning the cartridge counter-clockwise.

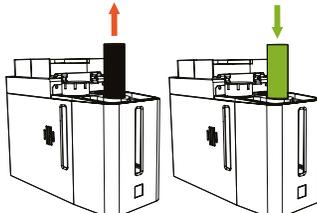


Step 5: Remove the de-ionizer cartridge and replace with a fresh cartridge.



Step 6: Fix replacement de-ionizer cartridge in place by turning clockwise.



Step 7: Close the top panel. The de-ionizer cartridge will need to be changed after 12 months.

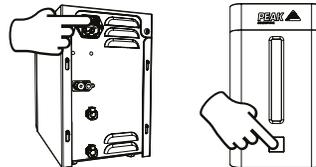

Step 8: Power up the generator using the main power switch on the rear of the unit. Once diagnostics are complete, the LEDs will be solid green and the generator will be ready to deliver gas to the application. Press the front button to supply gas to the application.

**Failure to change the DI cartridge can lead to cell damage and will invalidate your warranty*