
NG3000-5000 (All Models)

Installation Guide



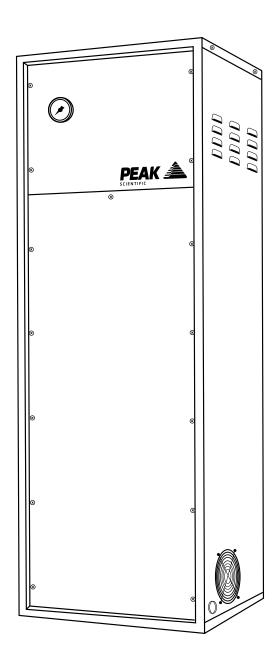

Change History

Rev	Comment	Name	Date
1	Initial Release	L. Couttie	17/08/17
2	Туро	L. Couttie	23/03/21
3	Fittings Kit Update	L. Couttie	30/05/22
4	Part addition	C. Denholm	16/05/2023

How to use this Installation Guide

This document is intended to be used only as a Quick Start Guide, to facilitate safe and correct installation and initial configuration of your Peak Scientific gas generator.

For more extensive user operation directions, we recommend you download the User Manual from the website.

Please visit www.peakscientific.com/downloads to download the full User Manual for your gas generator.

Thank you for selecting Peak Scientific to meet your laboratory gas generation needs, and should you require any further assistance or support please do not hesitate to contact Peak Scientific or Peak Partner from which you purchased your generator.

Safety Notices

Peak Scientific Instruments cannot anticipate every possible circumstance which may represent a potential hazard. The warnings detailed within this document detail the most known potential hazards, but by definition cannot be all inclusive. If the user employs an operating procedure, item of equipment or a method of working which is not specifically recommended by Peak Scientific, the user must ensure that the equipment will not be damaged or become hazardous to persons or property.

Symbols

This document uses the following symbols to highlight specific areas important to the safe and proper use of the Generator



A WARNING notice denotes a hazard. It calls attention to an operating procedure, process or similar, which if not correctly performed or adhered to, could cause personal injury or in the worst case death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood or met.



A CAUTION notice denotes a hazard. It calls attention to an operating procedure, process or similar, which if not correctly performed or adhered to, could cause damage to the Generator or the Application. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood or met.



Caution, risk of electric shock. Ensure power to the Generator has been removed before proceeding.

Safety Notice to Users



These instructions must be read thoroughly and understood before installation and operation of your Peak Generator. Use of the generator in a manner not specified by Peak Scientific MAY impair the SAFETY provided by the equipment.




When handling, operating or carrying out any maintenance, personnel must employ safe engineering practices and observe all relevant local health and safety requirements and regulations. The attention of UK users is drawn to the Health and Safety at Work Act 1974, and the Institute of Electrical Engineers regulations.




If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.


Fittings Kit

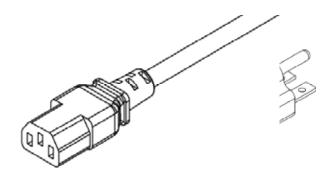


US Mains Cable C13 6-15 04-1029

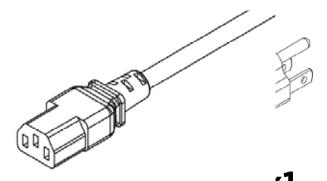


US Mains Cable C13 5-15 04-1039

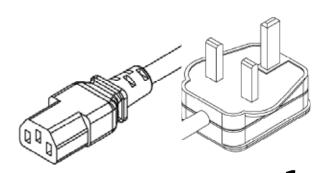

UK Mains Cable C13 04-1030

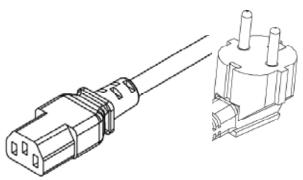

EU Mains Cable C13 04-1038

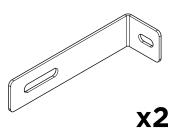

Wall Bracket 06-6341



1/4" - 6mm Push Fit Elbow Fitting 02-4331




Plain Washer 00-1034



1/4" x 1/4" Compression Fitting 02-4421




Shakeproof Washer 00-1036

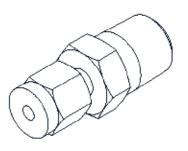


1/4" x 1/8" Compression Fitting 02-1000




No. 8 Wall Plug 00-4076

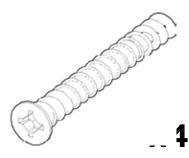

No. 8 Screw 00-4075

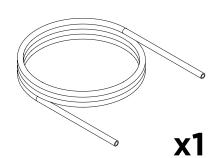


3m PTFE Tubing 00-1302 for non-compressor products only

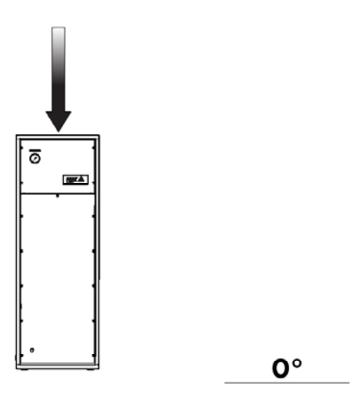


Unpack the generator from the shipping crate and position on a flat surface, in desired area.

2.

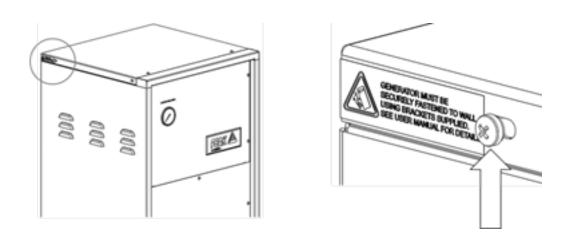


The NG range generator is designed to be mounted against a wall for safety reasons.

Locate the **screw** in the **top right rear corner** of the unit, beside the yellow warning label.

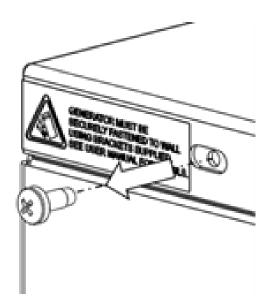


Remove the screw from the generator this should be repeated for the other side of the unit, and retain.

4.

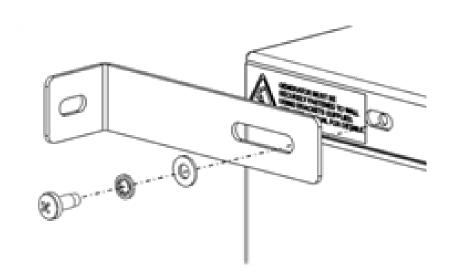


Next, **using the screw which was removed**, fit the **bracket and washers** provided to the generator. Again this should be repeated for the other side. The bracket is adjustable to accommodate varying kickboard widths.

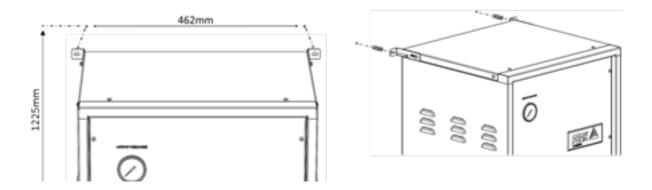

Finally, using the dimensions provided, **fix the wall plugs to the wall**, ensuring wall plug is suitable for the type of wall. If not, use the correct type. **Secure the generator to the wall** with the screws from the fittings kit.


6.

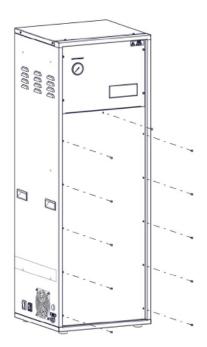

For NG 3000-5000(A) before the unit is used, the transit brackets must first be removed from the compressor.


For NG 3000-5000 please proceed to step 10

To remove the transit bracket first remove the 11 screws on the front panel as shown. then remove the front panel from the generator.

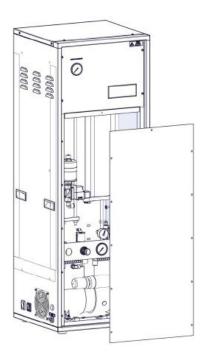


Then **remove the front panel** from the generator.

8.

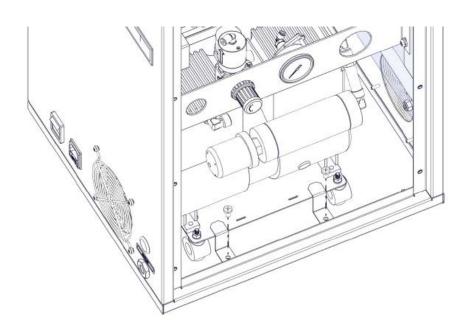


Now **locate the red transit bracket** attached to the compressor foot plate, and **remove the two screws** on the bracket.

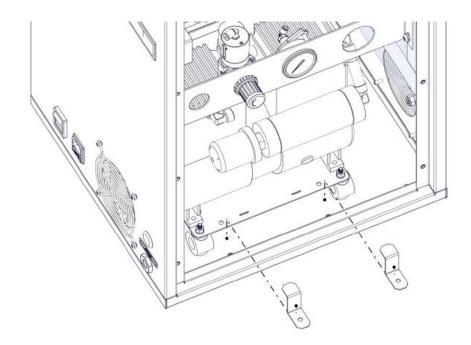


Next **remove the transit bracket** by first lifting up and then out of the generator. **Replace the front panel** and secure it to the generator using the 11 screws that were previously removed.


10.

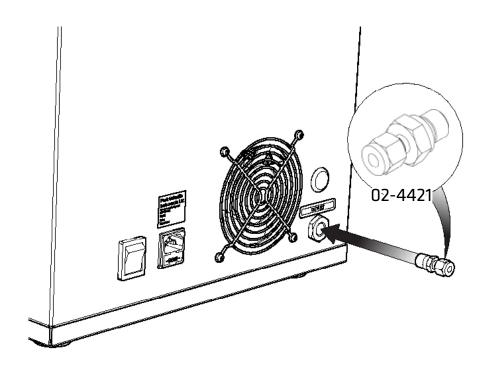

Attach the 1/4" Compression Fitting 02-4421 to the generators gas outlet.

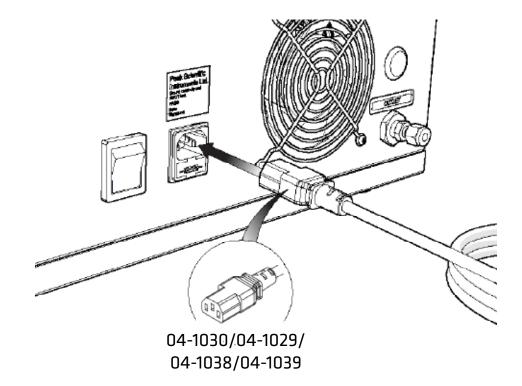


Select the appropriate **mains cable** from the fittings kit and plug the **IEC 60320/C19** cable into the **mains input** at the side of the generator.

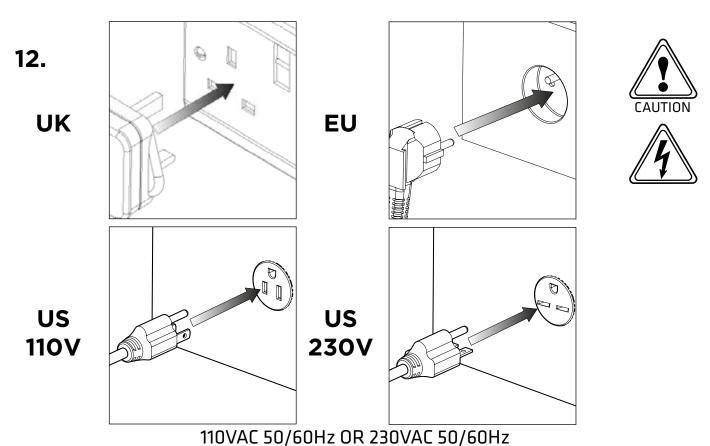


Plug the mains cable into the corresponding 110VAC 50/60Hz OR 230VAC 50/60Hz single phase power supply.

CAUTION ensure the correct cable has been selected for your electrical supply For non-gas versions of the MS Table proceed to step 15.

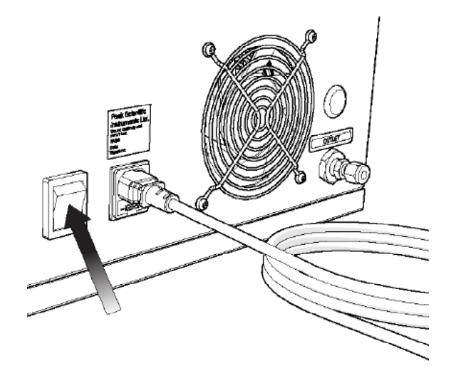


Switch the generator power **ON** using the switch on the side of the unit.

14.

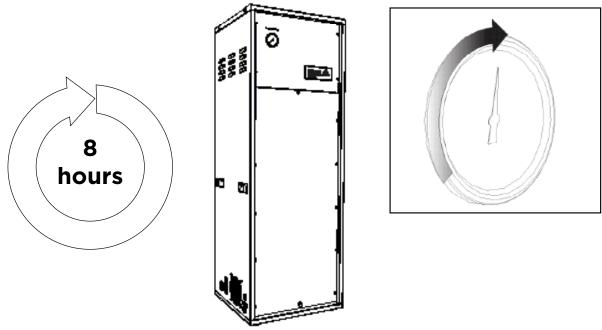


Leave the generator **switched on** for a period of **8 hours** to purge the system. The **pressure gauge** on the front panel will gradually increase to the factory set pressure.

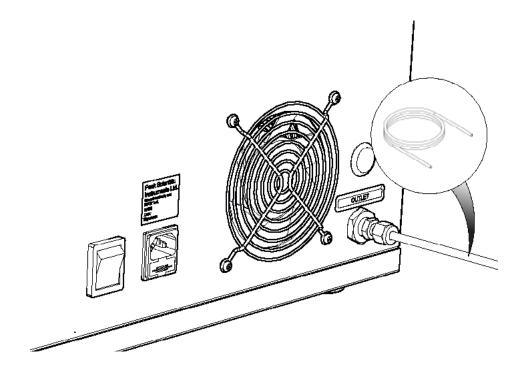

Attach suitable tubing to the generator's outlet. Either a 6mm, $\frac{1}{4}$ " or $\frac{1}{8}$ " diameter tubing will be suitable depending on your needs. If you are unsure please contact us.

16.

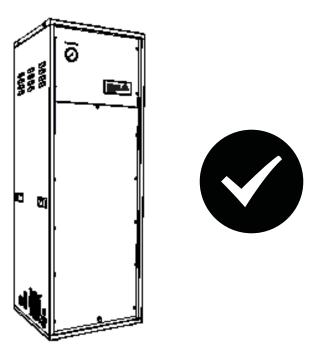

CONGRATULATIONS

Your **Peak Scientific** gas generator is now fully installed, operational and ready to supply gas on demand to your instrument.

General Notes

The Teflon tube supplied in the fittings kit is to allow the generator to be installed adjacent to the instrument it is supplying. If the generator is to be installed further away from the instrument then attention needs to be paid to pressure drops that could occur. The maximum distance away from the instrument the generator can be placed still using 6mm (4mm internal diameter) or ½" (3/16" internal diameter) tubing is 10m. For further information relating to tubing lengths please refer to the user manual.


Please familiarise yourself with the full **User Manual** available at **www.peakscientific. com/downloads**. This includes all other technical specifications, operating instructions, service requirements, contact details and trouble shooting.

Go Online or Complete and Return

We know that registering any of your recently purchased products is not the first thing on your mind- but it is very important to both of us. Not all warranties are alike and Peak Scientific stand out against other gas suppliers as we offer a comprehensive, quick response, on-site warranty. This means that in the very unlikely case that your gas generator develops a fault we have rapid support teams on-hand around the world who are able to come to your lab and get you back up and running in no time.

Register for your **comprehensive 12 month on-site warranty** with ease online at www.peakscientific.com/register.

Alternatively, you can send the completed form to Peak Scientific by post or email at warranty@peakscientific.com.

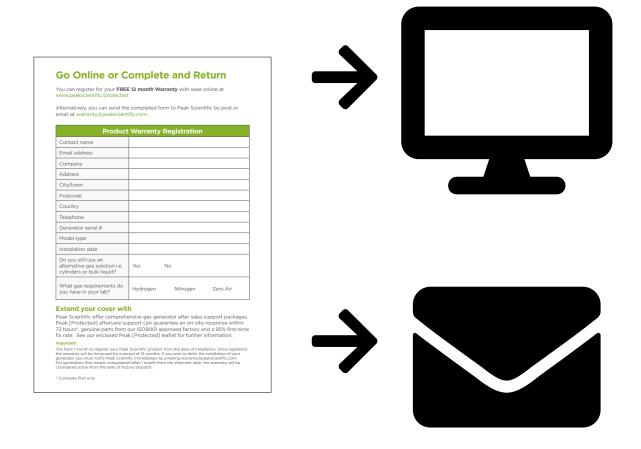

Important!

You have **1 month to register** your Peak Scientific product from the date of installation. Once registered the warranty will be honoured for a period of 12 months. If you wish to defer the installation of your generator, you must notify Peak Scientific immediately by emailing **warranty@peakscientific.com**. For generators that remain unregistered after 1 month from the shipment date, the warranty will be considered active from the date of factory dispatch.

Please visit www.peakscientific.com/downloads to download the full User Manual for your gas generator.

[PEAK Protected][™]

Peak Scientific has highly trained, fully certified Field Service Engineers located in over 20 countries across every continent around the world. This allows us to provide an industry-leading rapid response service to our customers. With **[Peak Protected]**, your laboratory's productivity becomes our top priority.

To discuss Peak Protected generator cover and payment options speak to your local Peak Representative or for further information contact: **protected@peakscientific.com**.

Peak Scientific

Fountain Crescent Inchinnan Business Park Inchinnan PA4 9RE Scotland, UK

Tel: +44 141 812 8100 **Fax:** +44 141 812 8200

For further information on any of our generator products please contact discover@peakscientific.com

